

(7) The bridge shall be operated manually from the tender's house located at the bridge until all necessary repairs are completed to the remote operation equipment.

[CGD 82-025, 49 FR 17452, Apr. 24, 1984, as amended by CGD3 83-059, 49 FR 44208, Nov. 5, 1984; CGD01-98-032, 64 FR 28103, May 25, 1999; USCG-2001-10881, 71 FR 70312, Dec. 4, 2006; USCG-2012-0918, 78 FR 14446, Mar. 6, 2013]

VIRGINIA

§ 117.995 Appomattox River.

The draw of the Seaboard System Railroad bridge, mile 2.5 at Hopewell, shall open on signal if at least 24 hours notice is given to the Seaboard System Agent at Hopewell. However, a drawtender shall be in constant attendance and the draw shall open on signal upon 30 days notice, in writing, to do so from the District Commander.

§ 117.997 Atlantic Intracoastal Waterway, South Branch of the Elizabeth River to the Albermarle and Chesapeake Canal.

(a) The draw of the Belt Line Railroad Bridge, mile 2.6, in Portsmouth and Chesapeake will operate as follows:

(1) The bridge will be left in the open position at all times and will only be lowered for the passage of trains and to perform periodic maintenance authorized in accordance with subpart A of this part.

(2) The bridge will be operated by the controller at the Berkley Yard office.

(3) The controller will monitor waterway traffic in the area of the bridge and directly beneath the bridge with closed circuit cameras mounted on top of the bridge and with surface navigational radar.

(4) When the bridge closes for any reason, the controller will announce 30 minutes in advance, 15 minutes in advance, and immediately proceeding the actual lowering, over marine channel 13, that the Belt Line Railroad Bridge is closing for river traffic. In each of these three announcements, the bridge/train controller will request all concerned river traffic to please acknowledge on marine channel 13.

(5) The bridge shall only be operated from the remote site if closed circuit visual and radar information shows there are no vessels in the area and no

opposing radio communications have been received.

(6) While the Belt Line Bridge is moving from the full open position to the full closed position, the bridge/train controller will maintain constant surveillance of the navigational channel to ensure no conflict with maritime traffic exists. In the event of failure of a camera or the radar system, or loss of marine-radio communications, the bridge shall not be operated by the off-site bridge/train controller from the remote location.

(7) If the off-site bridge/train controller's visibility of the navigational channel is less than $\frac{3}{4}$ of a mile, the bridge shall not be operated from the remote location.

(8) When the draw cannot be operated from the remote site, a bridgetender must be called to operate the bridge in the traditional on-site manner.

(9) The Belt Line mid-channel lights will change from green to red anytime the bridge is not in the full open position.

(10) During the downward and upward span movement, a warning alarm will sound until the bridge is seated and locked down or in the full open position.

(11) When the bridge has returned to its full up position, the mid-channel light will turn from red to green, and the controller will announce over marine radio channel 13, "Security, security, the Belt Line bridge is open for river traffic." Operational information will be provided 24 hours a day on marine channel 13 and via telephone (757) 543-1996 or (757) 545-2941.

(b) The draw of the Norfolk and Western railroad bridge across the South Branch of the Elizabeth River, mile 3.6 at Portsmouth-Chesapeake, shall be maintained in the open position; except the draw may close for the crossing of trains and maintenance of the bridge. When the draw is closed, a drawtender shall be present and the draw shall open on signal.

(c) The draw of the Gilmerton (US13/460) bridge, mile 5.8, in Chesapeake:

(1) Shall open on signal at any time for commercial vessels carrying liquefied flammable gas or other hazardous materials.